

# Home Decorators

—Collection—

BF-23639 OXFORD COLLECTION 3 DRAWERS LATERAL FILE CABINET









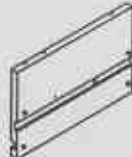
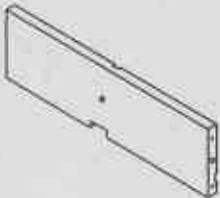


## ASSEMBLY INSTRUCTIONS

Made In China

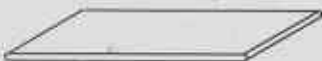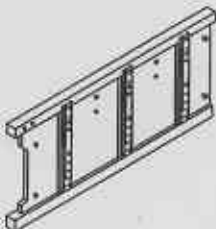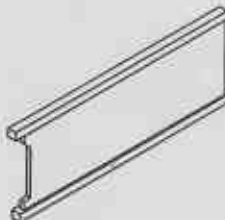


Thank you purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, Compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department. For efficient and speedy service please indicate the model number and code letter of part(s) need

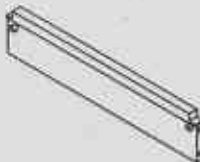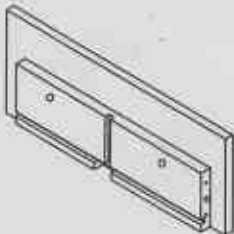IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

| PARTS LIST   |   |  |
|--|---|--|
| <b>A</b><br><br>TOP PANEL-1PC             | <b>B</b><br><br>LEFT SIDE PANEL-1PC            | <b>C</b><br><br>RIGHT SIDE PANEL-1PC          |
| <b>D</b><br><br>BOTTOM PANEL-1PC        | <b>E</b><br><br>BACK PANEL-2PCS             | <b>E1</b><br><br>ACROSS PANEL-2PCS          |
| <b>F</b><br><br>FRONT DRAWER PANEL-3PCS | <b>G</b><br><br>RIGHT SIDE DRAWER PANEL-3PCS | <b>H</b><br><br>LEFT SIDE DRAWER PANEL-3PCS |
| <b>I</b><br><br>BACK DRAWER PANEL-3PCS  | <b>J</b><br><br>BOTTOM DRAWER PANEL-3PCS     | <b>K</b><br><br>ACROSS DRAWER PANEL-3PCS    |

L

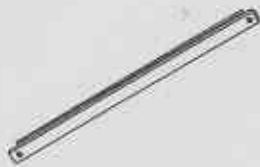

REAR PANEL GUIDE-1PC

M



DRAWER SPLINT-3PCS

N



LOW PANEL-1PC

O



CAM-BOLTS-12PCS

P



CAM-LOCKS-12PCS

Q



SCREWS-6PCS

R



SCREWS-26PCS

S



DOWELS-20PCS

T



SCREWS-44PCS

U



KNOB-6PCS

V



SCREWS-1PC

W



FILE SUPPORTS-12PCS

X




SCREWS-6PCS

A1





CAM-TOOL-1PC

B1





FEET-1PC

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

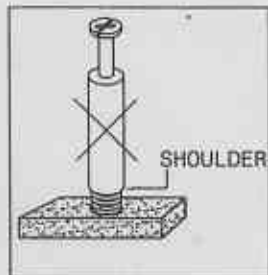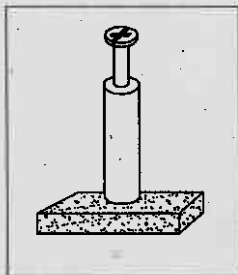


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

## HOW TO USE THE CAM-TOOL

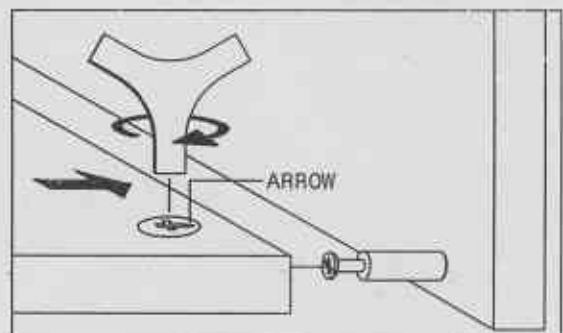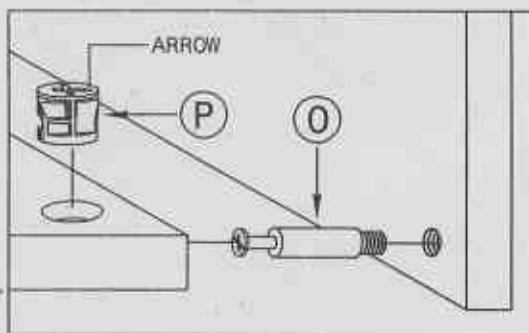


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

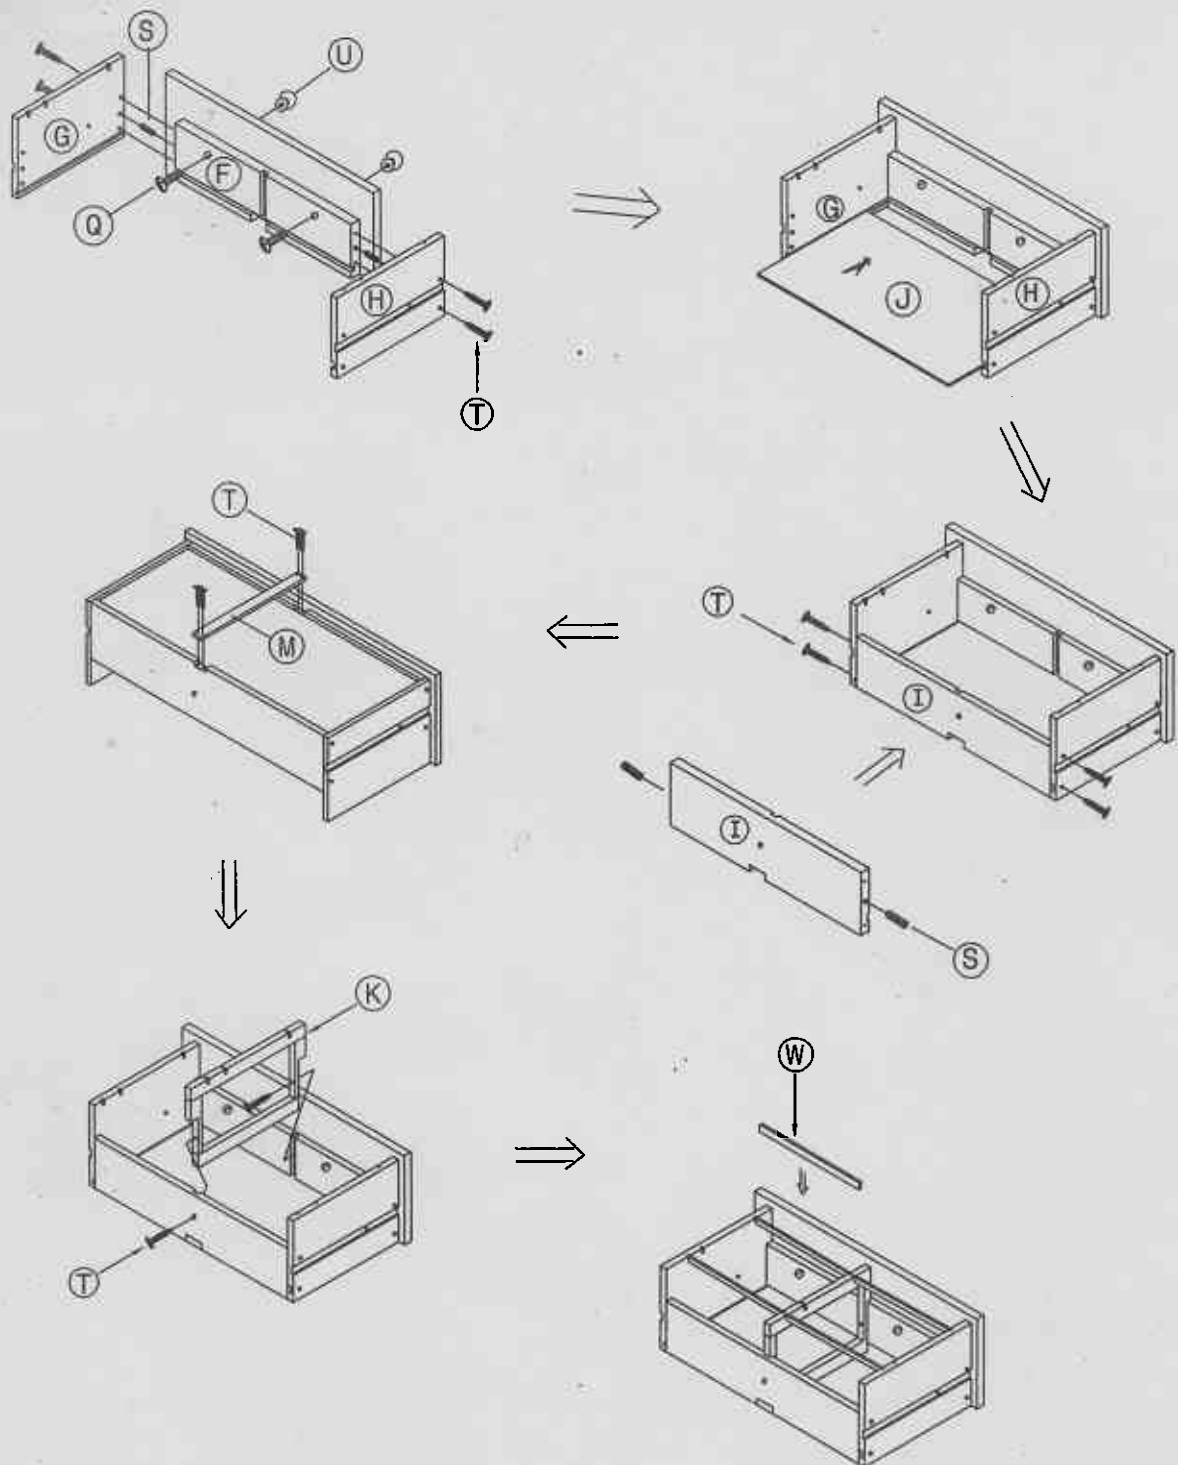


### 1) .ASSEMBLE THE DRAWER.

- INSERT DOWELS(S) INTO HOLES IN PANEL(F) AND ATTACH SIDE PANEL(G/H) USING SCREWS(T).
- ATTACH THE KNOB(U) TO FRONT DRAWER PANEL(F) USING SCREWS(Q).
- INSERT BOTTOM DRAWER PANEL(J) INTO SLOT IN SIDE DRAWER PANEL(G/H).
- INSERT THE DOWELS(S) INTO HOLES IN BACK DRAWER PANEL(I) AND ATTACH USING SCREWS(T).
- ATTACH DRAWER SPLINT(M) TO DRAWER CUT-OUT USING 4 SCREWS(T).
- ATTACH THE ACROSS DRAWER PANEL(K) TO FRONT/BACK DRAWER PANEL USING 2 SCREWS(T).
- FINALLY ,INSERT THE FILE HANGER(W) INTO THE CUT-OUT OF DRAWER PANEL SIDE/ACROSS.

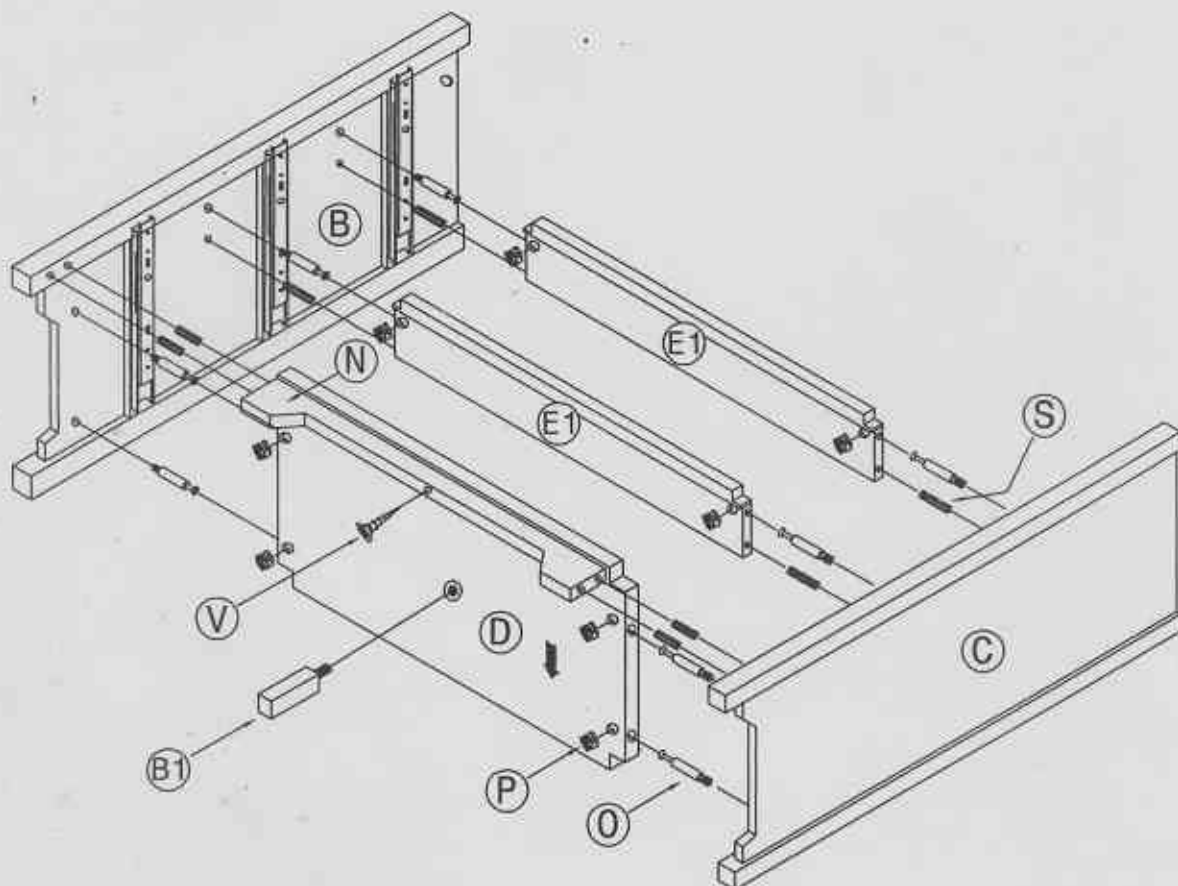


## 2) .ASSEMBLE SIDE PANEL(B/C) .

- ATTACH THE LOW PANEL(N)TO BOTTOM PANEL(D)USING SCREWS(V) .
- INSERT THE 8 DOWELS(S)INTO HOLES IN ACROSS PANEL(E1)AND LOW PANEL(N) .
- ROTATE THE 8 CAM-BOLTS(O)INTO HOLES IN SIDE PANEL(B/C) .
- PLACE CAM-BOLTS(O)INTO HOLE IN PANEL(D/E1)AND ATTACH USING CAM-LOCKS(P) .
- ROTATE THE FEET(B1)INTO HOLES IN BOTTOM PANEL(D) .

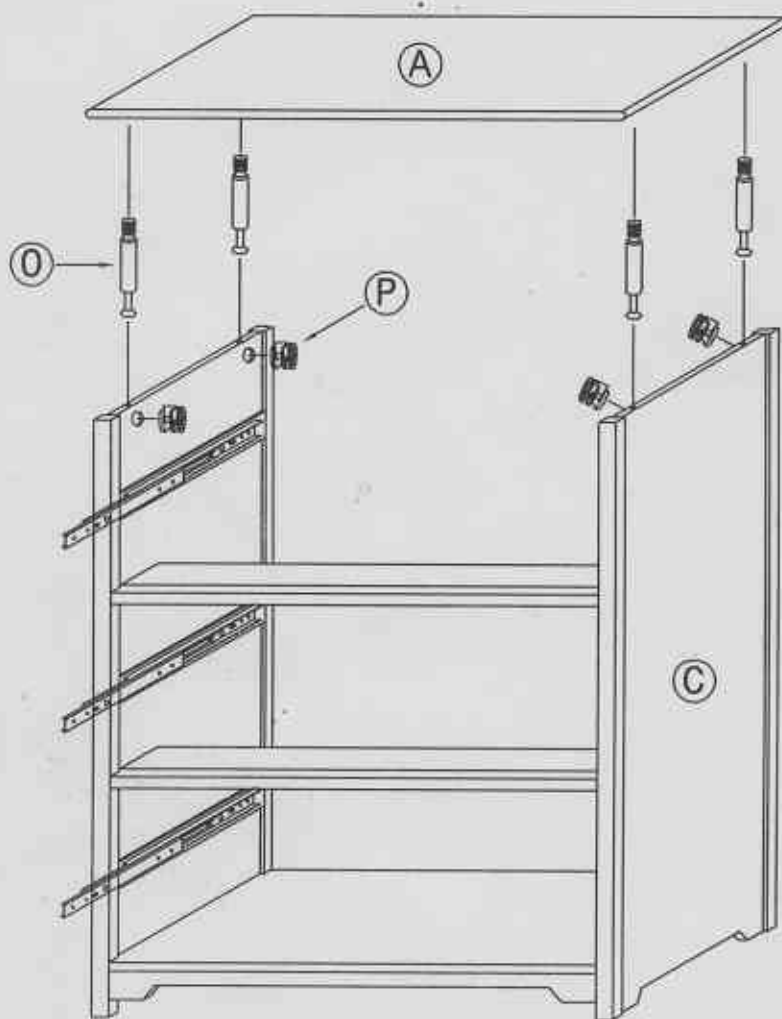

3) ASSEMBLE TOP PANEL (A) .


- ROTATE THE 4 CAM-BOLTS(O) INTO HOLES IN TOP PANEL (A) .
- PLACE CAM-BOLTS(O) INTO HOLE IN PANEL (B/C) AND ATTACH USING CAM-LOCKS (P) .

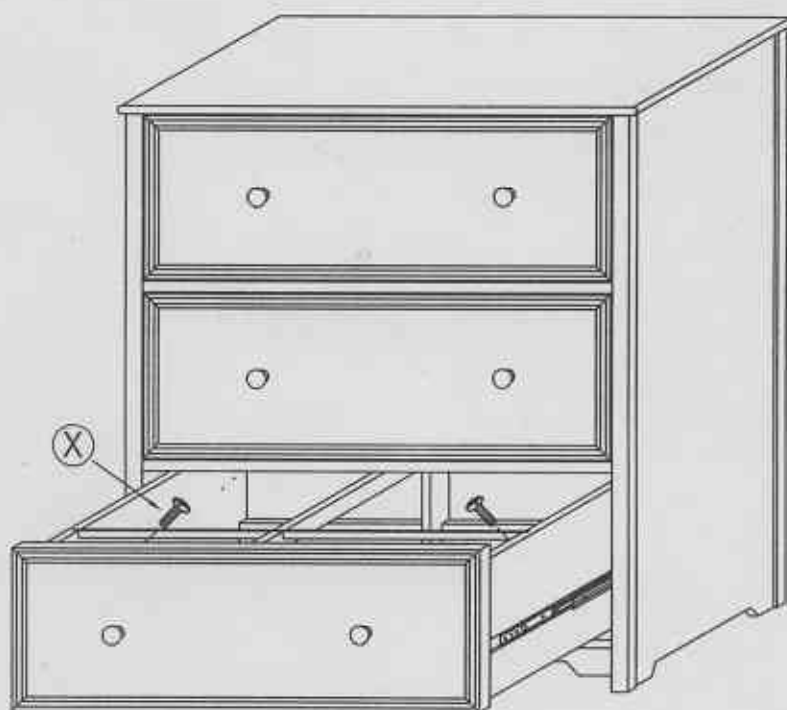

4) ASSEMBLE THE DRAWER.

- ATTACH THE DRAWER USING SCREWS(X). (ROTATE THE SCREWS(X) THROUGH THE HOLES OF DRAWER PANEL SIDE(G/H) INTO SLIDERS.)




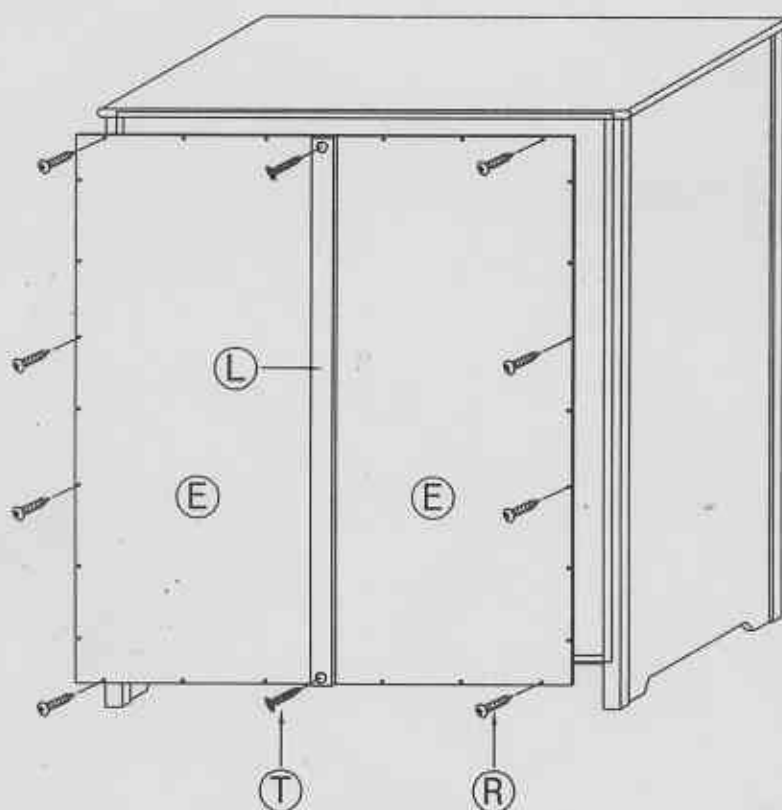

**5) .ASSEMBLE THE BACK PANEL(E).**

- INSERT THE BACK PANEL(E) INTO SLOTS IN REAR PANEL GUIDE(L).
- ATTACH THE BACK PANEL(E) AND REAR PANEL GUIDE(L) USING SCREWS(R/T).

|   |   |  |   |
|---|---|--|---|
| W1  | X1  | Y1   | Z1  |
|  |  |  |  |
| HOOK-2PCS   | SCREWS-2PCS   | HANGER-2PCS  | SCREWS-2PCS   |

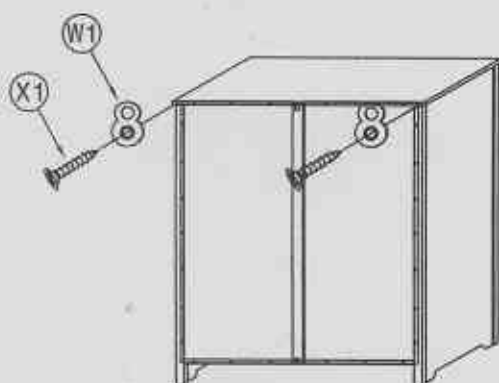

- I** • ATTACH 2 HOOK(W1) USING 2 SCREWS(X1) IN THE  
PREDRILLED HOLES OF REAR TOP PANEL.

- II** • DRILLING TWO HOLES ON THE WALL IT AS BETWEEN TOP PANEL HOLES DISTANCE.  
• PUT 2 HANGER(Y1) HIT INTO HOLES IN WALL AND ROTATE 2 SCREWS(Z1) INTO HANGER(Y1).

